

Whackies 14 Flavor Round User Manual

Rev. 4

1. Raise the header by twisting clockwise as shown.




2. Remove each dispenser from the boxes.



3. You can fill each dispenser before or after the dispenser is on the machine.

***WARNING DO NOT ATTEMPT TO MOVE MACHINE AFTER FILLING DISPENSERS ***


4. Slide the false front door down if you prefer have candy stay in the false front area. If you prefer to have the candy leave the false front area, slide the door up.

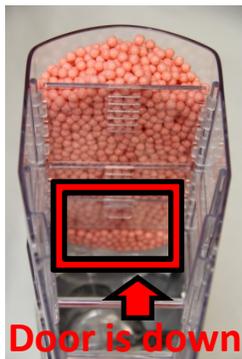

5. Fill the hopper with remaining Whackies.



6. Line up the two key-hole slots on the back of the dispenser with the support bolts on the machine. Slide the dispenser down.

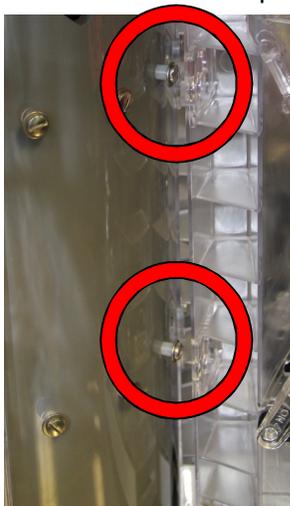

7. Line up the bottom of the dispenser to the catch tray.



Bottom of dispenser

Catch tray

- Complete steps 2-7 for the remaining dispensers. A total of 14 dispensers go on the machine.
- Lower the sign by twisting counter-clockwise so it rests on the top of the dispensers as shown.




- Place tubes on tube holders.




- One of the bottom compartments has a receptacle that collects spilled candy (Indicated by Sticker on pole .



- To lock the machine in place, push down as shown.

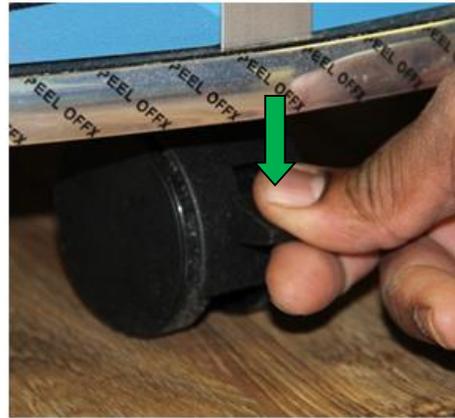

- Pull up on the tab to unlock the casters.

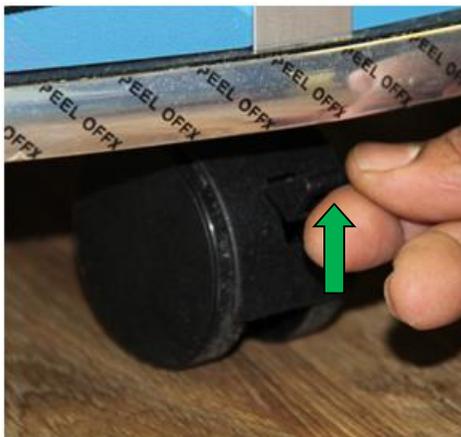

- Remove the film off of the chrome trim at the bottom of the machine.



15. Remove the cap from tube and insert tube into the opening of the dispenser.



CORRECT

16. While holding the tube to the dispenser pull down to dispense Whackies.



17. To remove the dispenser(s) first raise the top by rotating the header clockwise.



18. Lift the dispenser straight up and then towards you to remove it from the support bolts.



Creative Concepts, Inc.

1500 Georgia Road Building A

Irondale, AL 35210

Toll Free: (866) 838-0570 Fax: (205) 838-0999

puckerpowder.com