


# Bulk Mechanism Removal Instructions

(\*\*More information found in Owners Manual pages 5-10\*\*)

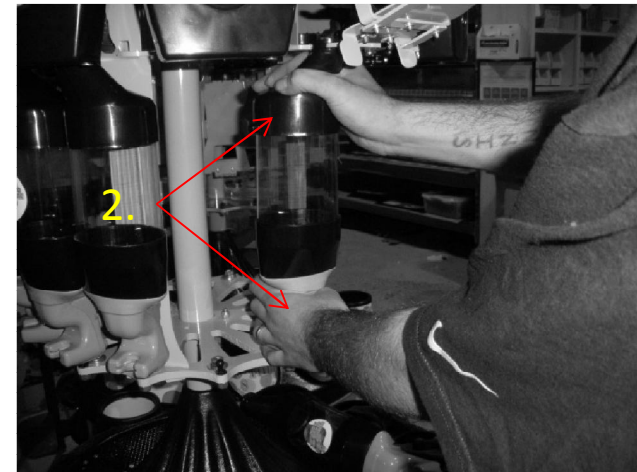

1. Release Bottle Holder Assembly and place on shoulder.
2. After placing on shoulder, position hands on the bottom and top of the mechanism.
3. With hands in position turn mechanism clockwise and down to remove.