


Swapping to the New Mini-Mech

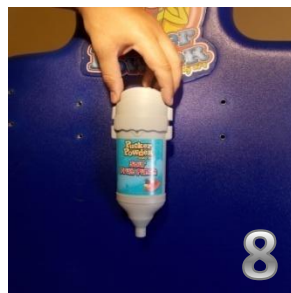

1. Remove the bottle and dispensing mechanism from the housing. Now that the dispensing mechanism has been removed there should be 2 screws visible. Use the allen wrench provided to remove both of the screws and remove the mechanism. (Pictures 1 & 2)
2. Using the 2 removed screws, attach the included brackets as shown (picture 3) **Do not over tighten the screws!**
3. Insert the new dispenser by positioning the knobs on the dispenser back (picture 4) into the top right hand side of the two openings on the bracket and slide it down until it locks into place (picture 5).
4. After the new dispensing mechanism is in place fill it with powder. Take the cap off the dispenser and let it hang next to the mechanism. Pour the powder from the old mechanism into the new dispenser, or take a new bottle and pour in the powder. (Picture 6 & 7)
5. Place the cap back on the mechanism. **The cap must be placed straight down to function correctly! Avoid allowing any tilt while lowering the cap vertically onto the dispenser.** There are magnets which will help pull it into place. If the cap is placed on at an angle, the push button will not function well. (Picture 8)
6. To remove the mechanism from the bracket, for cleaning or other purposes, push in the lever at the top left of the bracket and slide the mechanism up and out to the right. It will lift right out. (Picture 9)