



12 COLOR UNIT

INSTALLING THE WRAP RETRO


Creative Concepts, Inc.
1500 Georgia Road
Irondale, Alabama 35210

Phone: 205-838-0570
Fax: 205-838-0999

Publication Version. 1.0
Installing the Wrap Retro 04-01-2008




1. Remove all candy from the unit for easier handling and then remove the top (a) and header sign (b).

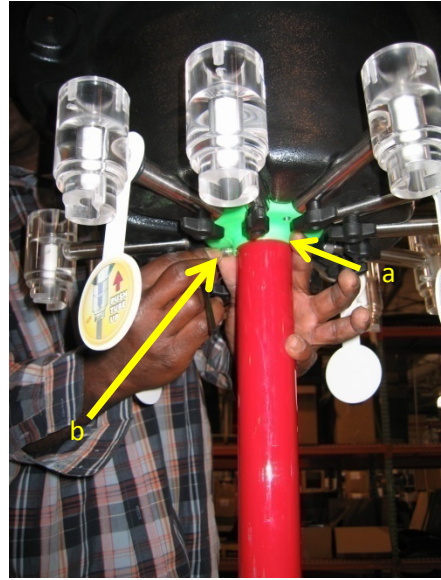

2. Put a mark on the pole at the bottom of the pole bracket (a) for future reference. Loosen the 3/16" set screw (b).



3. Lift the top portion from the pole.

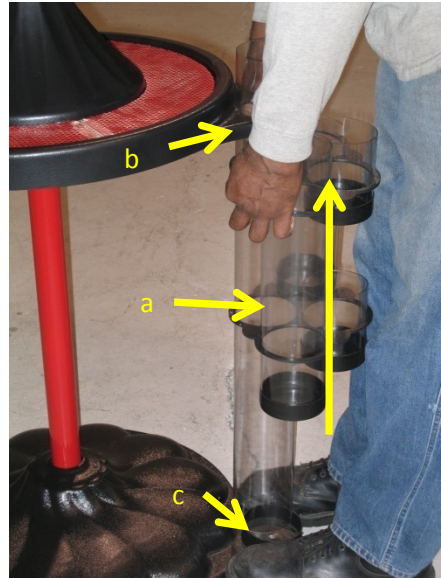

4. Slide the "Tube Holder" assembly (a) up through the catch basin (b) and from the holder on the bottom (c).



5. Slide the "Tube Holder" assembly down and away from the catch basin.



6. Loosen the 3/16" set screw that secures the "Catch Basin" to the pole.



7. Slide the "Catch Basin" (a) from the pole. Then slide the "Bottom" (b) from the pole.



8. Slide the "Wrap Retro" assembly over and down to the bottom of the pole. The holes in the bottom of the "Wrap Retro" assembly will match up with the leveling bolts in the metal base plate.



9. Make sure that the “Screen” is in place on the “Catch Basin”.



10. Slide the top portion back onto the pole down to the mark made in step 2.



11. Replace the header sign and top that were removed in step 1.



12. Position the Waste Basket and Tube Holders over the Thumb Screws and push them downward to lock them into place.